



進氣量

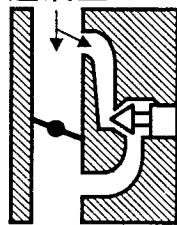

節流閥

怠速  
控制馬達

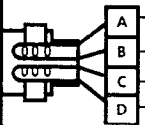

A  
B  
C  
D

441  
442  
443  
444

主電腦

A4  
A10  
A11  
A5

IAC COIL "A" HI  
IAC COIL "A" LO  
IAC COIL "B" HI  
IAC COIL "B" LO