

 
接頭接腳

波型

電壓

點火信號(EST)


A



— 4 volts(run)
— 1 volts(crank)
— 0 volts

旁通電路控制電壓

 B



— 5 volts (run)
— 0 volts (crank)

曲軸信號輸出(點火)


C



— 11 volts
— 0 volts

曲軸信號輸出(噴油)

D

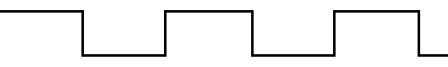

— 11 volts
— 0 volts

轉速錶信號

E



— 6 volts
— 0 volts

凸輪信號輸出(噴油)

F



— 11 volts
— 0 volts

曲軸信號輸入(點火)


G



— 9.5 volts
— 0 volts

曲軸信號輸入(噴油)

H

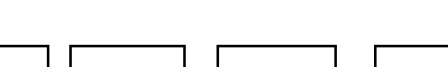

— 9.5 volts
— 0 volts

凸輪信號輸入

J



— 9.5 volts

沒有使用

K

Not Used

搭鐵

L



— 0 volts

感知器搭鐵

M



— 0 volts

感知器電源

N



— 10 volts
— 0 volts

電瓶電源

O



— 14.3 volts
— 0 volts

電瓶電源

P



— 14.3 volts(Key ON)
— 0 volts(Key OFF)