


高壓線圈/點火模組總成

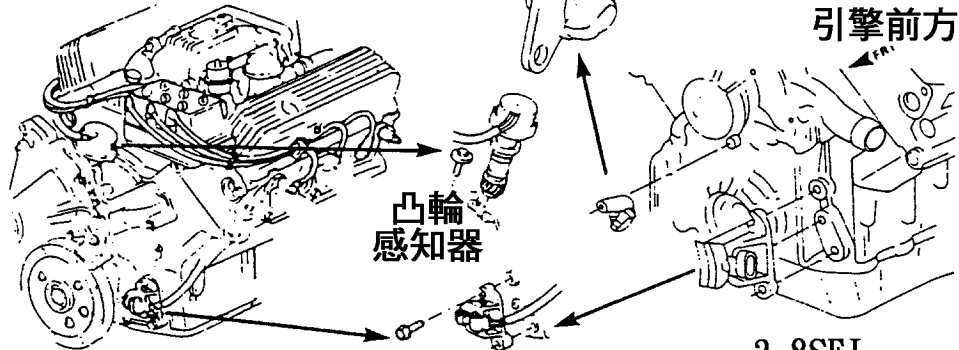

點火順序：—1-6-5-4-3-2
3.8L SFI 渦輪增壓


凸輪軸信號
曲軸信號

曲軸感知器


3.8SFI
非渦輪增壓



實0372

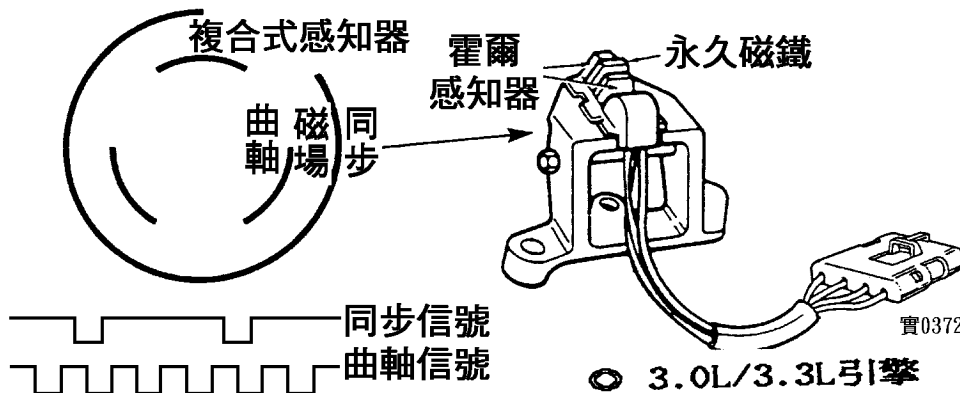

實0372

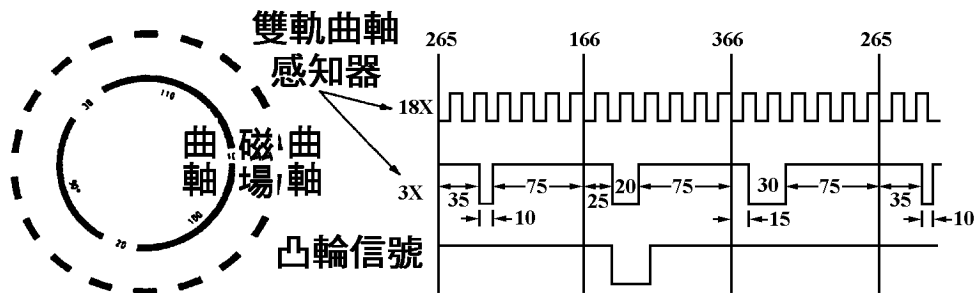

實0372

◎ 3800引擎